

thermal command

Use this command to display and configure the thermal mode policy of the host system.

Running the **thermal** command with no options displays the thermal mode policy. The following table shows the arguments for the options.

Table 1. thermal command.

The following table is a multi-row three column table consisting of the options, option descriptions, and associated values for the options.

Option	Description	Values
-mode	Thermal mode selection	normal, performance, minimal, efficiency, custom
-table	Vendor, device identification (ID) and alternate thermal table	

Syntax:

```
thermal [options]  
option:  
  -mode thermal_mode  
  -table vendorID_devicetable_number
```

Example:

```
system> thermal  
-mode normal  
-table 80860126 1 10DE0DFA 3  
system>
```

Parent topic: [Configuration commands](#)